

AIRSPIKE

ADVANCED MODEL ROCKET

ASSEMBLY AND OPERATION INSTRUCTIONS


BEFORE YOU BEGIN:

Study the illustrations and sequence of assembly. The sequence of assembly is important. Review the parts list and become familiar with all parts before assembly. If any parts are missing or damaged, contact RCS @ (435)-865-7100 or through our web site @ www.aerotech-rocketry.com.

DO NOT MODIFY THE DESIGN OF THE ROCKET.

Changes to the design of the rocket such as, but not limited to, reducing the fin size, shortening the body tube, or modifying the motor tube assembly can adversely affect the flight stability of the rocket and may void this products warranty.

Only use AEROTECH™ Composite Model Rocket Motors in this model rocket. See recommended AEROTECH™ motors in the Motor Matrix sheet

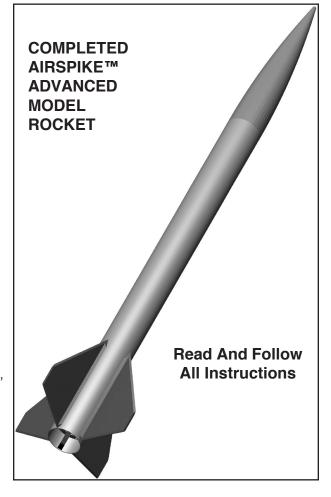


Read and follow the Model Rocket Safety Code of the National Association of Rocketry (NAR) and comply with all federal, state, and local laws in all activities with model rockets.


PARTS LIST

Description	Part #	Qty	Description	Part #	Qty
Thrust ring (7/16"/11mm)	(14010)	1	Ejection gas baffle	(19030)	1
Thrust ring flange (1/16"/1.6mm)	(14011)	1	Screw eye	(19015)	1
Motor tube (12"/30.5cm)	(12912)	1	Shock cord (6'/1.8m)	(17386)	1
Motor hook	(19001)	1	Body tube (22-3/4"/58cm)	(11923)	1
FIN-LOK™ rings-4 fin	(19344)	2	Launch lugs	(19035)	2
Centering rings (1-25/32"/46mm)	(14829)	2	Nose cone	(11191)	1
Fins	(11710)	4	Parachute (16"/41cm diameter)	(13016)	1
Cooling mesh	(19011)	1	"F" spacer tube (1"/25mm)	(14003)	1

ADDITIONAL MATERIALS AND TOOLS REQUIRED


12" Ruler (with 1/16" resolution) Medium viscosity cyanoacrylate (cyano') cement OR 5 to 15 minute cure epoxy Hobby knife 1/8" Wood dowel at least 12" long #240 / #400 Grit sandpaper

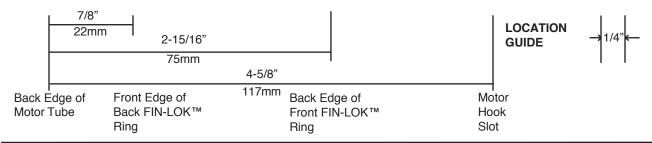

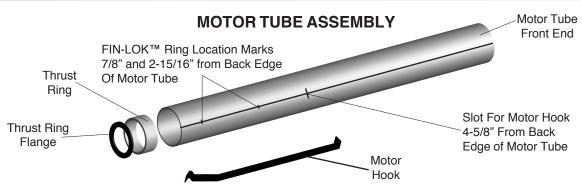


- 1. Cement the thrust ring flange (1/16"/1.6mm thick) to the thrust ring (7/16"/11mm long). Set the thrust ring assembly aside to dry.
- Find the line drawn along the side of the motor tube.
 Using the Location Guide printed along the top edge of this instruction sheet, cut a 1/4" (6mm) long slot 4-5/8" (117mm) from the back end of the motor tube and next to the line on the motor tube as shown.
- 3. Using the Location Guide, make a mark along the motor tube line 2-15/16" (75mm) from the **back end** of the motor tube. This mark locates where the **back edge** of the front FIN-LOK™ ring will be. Make another mark 7/8" (22mm)

- from the back end of the motor tube. This mark locates where the **front edge** of the rear most FIN-LOK™ ring will be.
- 4. Insert the tab of the motor hook into the slot cut into the motor tube. Use a small dowel to apply several drops of cement around the inside of the motor tube just behind where the motor hook comes through the motor tube wall. Then, with the thrust ring flange facing the back, insert the thrust ring assembly into the motor tube. Use a dowel to push the thrust ring assembly forward until it stops against the tab of the motor hook.

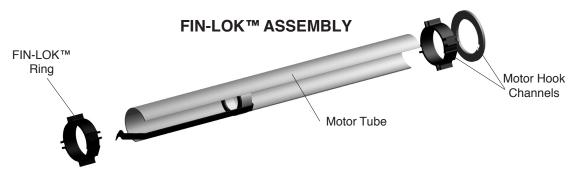


NOTE: FROM THIS POINT ON, DO NOT USE ANY CEMENT UNTIL REACHING ASSEMBLY STEP 5.

- 1. With their motor hook channels aligned with the motor hook, slide a FIN-LOK™ ring and then a centering ring over the **front end** of the motor tube. Push on the centering ring until the **back edge** of the FIN-LOK™ ring is moved to the forward most mark made in Step 3 above. (**NOTE:** The rings are designed to be a tight fit on the motor tube. If the rings are difficult to slide onto the motor tube, round the inside edges of the rings with sandpaper. If the FIN-LOK™ rings need to be turned after they are on the motor tube,
- use a small piece of cloth to provide a better grip.)
- Slide the other FIN-LOK™ ring over the back end of the motor tube. Push on the FIN-LOK™ ring until the front edge of the FIN-LOK™ ring is at the rear most mark made in Step 3 above.
- 3. Using the line on the motor tube as a guide, gently twist the fin locks of the back FIN-LOK™ ring until they are aligned with the fin locks of the front FIN-LOK™ ring.

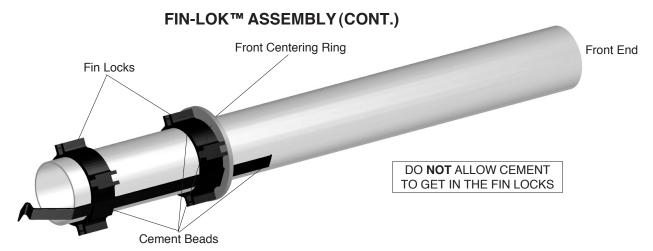


- 4. Test the proper positioning and alignment of the FIN-LOK™ 6. rings by snapping the fins into the fin locks. If any fin does not snap into place, check to see that each FIN-LOK™ ring is the correct distance from the back end of the motor tube and that the fin has no plastic flashing left from production that may be preventing a proper fit. Remove any plastic flashing with a hobby knife or sandpaper. After making any adjustments, carefully remove the fins. Check that the front centering ring is still positioned next to and touching the front FIN-LOK™ ring.
- 5. Apply a bead of cement where the front centering ring meets the motor tube. Without getting cement into any of the finlocks, apply cement only to the areas BETWEEN the finlocks where the front FIN-LOK™ ring meets the front centering ring and the motor tube.
- Without getting cement into any of the finlocks, apply cement only to the areas BETWEEN the finlocks where only the **front edge** of the back FIN-LOK™ ring meets the motor tube. DO NOT apply cement to the back edge of the back FIN-LOK™ ring. (**NOTE:** The unique AEROTECH FIN-LOK™ fin mounting system carries and distributes aerodynamic and thrust loads throughout an integrated rocket structure in a manner found in large aerospace vehicles. Loads are primarily borne by structural members and not cement.)
- 7. Apply a bead of cement around the motor hook forward of the front centering ring.

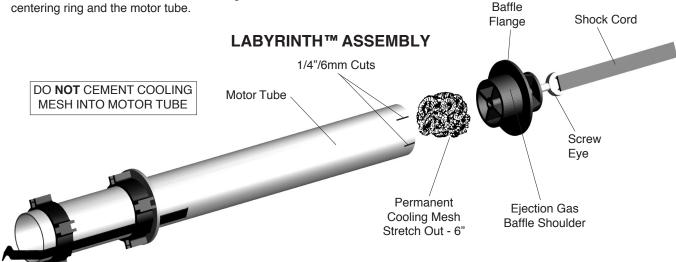

- Make four 1/4" (6mm) long cuts, 90 degrees apart, in the front end of the motor tube.
- 2. Stretch the cooling mesh to about 6" (15cm) in length.
 Insert the cooling mesh into the front end of the motor tube.
 (NOTE: Do not cement the mesh into the motor tube.)
- 3. Apply a thin film of cement to the front 2/3rd's of the shoulder of the ejection gas baffle and insert the baffle shoulder all the way into the front of the motor tube.
- Apply beads of cement where the baffle meets the motor tube and into each of the cuts in the motor tube.
- Screw the screw eye all the way into the hole at the front end of the baffle. Securely tie an end of the shock cord to the screw eye with a square knot. (CAUTION: Do not put cement on the knot of the shock cord. Cement will weaken the shock cord.


BODY AND FIN ASSEMBLY

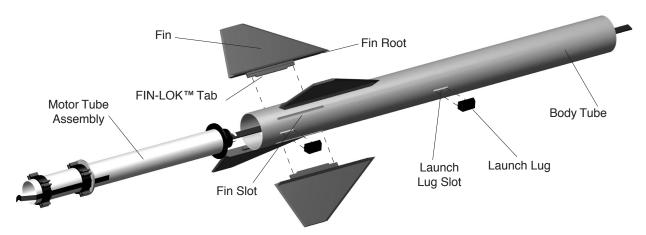

- Using a hobby knife, carefully remove any body tube material that may still be attached to any pre-cut slots in the body tube.
- Insert the loose end of the shock cord and then the motor tube assembly into the back of the rocket body tube as shown. Position the motor tube assembly so that the fin locks are located under and visible through the body tube's pre-cut fin slots.
- Apply cement along the full length of the fin root of a fin (area
 of the fin that makes contact with the outside surface of the
 body tube). Carefully insert the fin through a slot in the body
 tube and snap the fin into place. Repeat this process for the
 other three fins.

(**NOTE**: Each fin should be snug against the body tube.)

- 4. Through the back end of the body tube, apply cement where the fin tabs meet the motor tube, finlocks, front centering ring, and body tube. Through the front end of the body tube, apply cement where the baffle flange meets the inside surface of the body tube.
- 5. Lightly sand the surface of the body tube around the launch lug slots. Apply cement to the base of a launch lug. With the sloping portion of the launch lug facing toward the front of the body tube, insert the tab on the bottom of the lug into one of the pre-cut launch lug slots in the body tube. Repeat this process for the other launch lug.

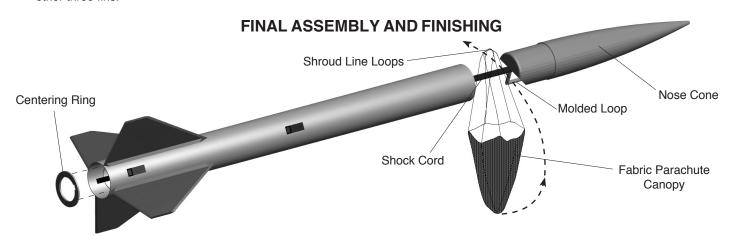

- Slide the rear centering ring over the back of the motor tube and motor hook and push it against the back FIN-LOK™ ring. Apply a bead of cement where the centering ring meets the body tube.
- Clean the rocket with a damp cloth. Paint the entire rocket with a primer coat of light gray paint. Let the primer dry completely. Paint the rocket in the color(s) of your choice. (CAUTION: Make sure the paint is compatible with high impact polystyrene plastic.) Do not paint the shoulder of nose cone where it fits inside of the body tube.
- Securely tie the loose end of the shock cord to the loop molded into the shoulder of the nose cone with a square

- knot. (CAUTION: Do not put cement on the knot of the shock cord. Cement will weaken the shock cord.)
- 4. Fasten the fabric parachute to the shock cord at a point about one (1) foot away from the nose cone in the following manner: Stretch out the shroud lines of the parachute so that the lines form three (3) loops one on top of the other. Lay the shock cord across all the shroud lines. Pass the canopy of the parachute over the shock cord and through the three (3) loops made by the shroud lines and pull tight. Pack the parachute and insert the nose cone into the body tube.

CUTAWAY VIEW OF COMPLETED AIRSPIKE™ ROCKET



Fins: 4-Trapezoidal With Modified

Double-Wedge Airfoil

Stages: 1

Number of Motors: 1

Recovery System: Parachute Kit part number: 89022

SINGLE USE MOTOR MATRIX FOR AIRSPIKE™ ROCKET

MOTOR DIA.	DESCRIPTION	PART#
29MM 29MM 29MM	F20-7W F23-7FJ G35-7W	62007 62307 73507
29MM	G38-7FJ	73807

OPERATION INSTRUCTIONS

- RECOMMENDED MOTORS: Only use AEROTECH composite
 model rocket motors when flying your AEROTECH rocket. See page
 5 of these instructions for Motor Matrix of recommended motors to
 be used with your AIRSPIKE rocket.
- 2. RECOVERY SYSTEM PREPARATION: Roll the parachute and shroud lines, starting from the canopy peak, into a loose cylinder that will easily slide into the rocket body tube. Pack the long portion of the shock cord into the body tube first. Next, insert the parachute. Finally, insert the short length of shock cord into the body tube on top of the parachute and put on the nose cone. Make sure that the parachute, shroud lines, and shock cord are not caught between the body tube and the shoulder of the nose cone. The nose cone should slide freely. (NOTE: Because your AEROTECH rocket has the LABYRINTH™ ejection gas cooling system, no recovery wadding is required.)
- MOTOR PREPARATION: The motors recommended for your AEROTECH rocket vary in physical size as well as performance. The "F" spacer tube allows the use of shorter motors.
 - Prepare your AEROTECH rocket motor according to the instructions that come with the motor. Be sure the motor hook snaps in behind the nozzle end of the motor and holds the motor securely in place. If the motor hook does not hold the motor in place, bend the end of the hook until it does
- PRE-LAUNCH CHECKOUT: Before <u>EVERY</u> flight, perform a complete pre-launch checkout of your rocket;
 - Check that all fins and launch lugs are mounted securely and not damaged.
 - Examine the body tube and nose cone to make sure that they are free of damage.
 - Check that the shock cord is securely mounted to the ejection gas baffle and nose cone.
 - Check that the shock cord and parachute are free from any damage. 9.

See that the nose cone, packed parachute and shock cord move freely. After awhile, an ejection residue may build up at the top inside surface of the body tube. Wipe this residue away with isopropyl ("rubbing") alcohol.

With the tail of the rocket pointed down and the motor tube empty, shake the rocket to remove any loose ejection charge debris left from a previous flight. Periodically, fluff up the cooling mesh using a bent wire inserted through the back end of the motor tube.

Be certain the motor to be used is a recommended AEROTECH model rocket motor of a size appropriate for the launch area.

Be sure the motor hook and motor tube are not damaged and hold the motor securely in place.

If the pre-launch checkout reveals and damage, **repair the damage** before the rocket is flown again.

- 5. LAUNCH PAD: Your AEROTECH rocket must be flown from a launch pad with a 1/4" (6.4mm) diameter metal launch rod at least 36" (0.9m) long (as measured from the top of the blast deflector), such as the AEROTECH MANTIS™ model rocket launch pad.
- 6. MOTOR IGNITION: Only launch your rocket using a remotely controlled and electrically operated launch controller such as the AEROTECH™ INTERLOCK™ model rocket launch controller. Keep yourself and all other people at least 30 feet (10 meters) away from the rocket during launch.
- 7. LAUNCH AREA: Launch the rocket in a cleared outdoor area free of tall trees, power lines, and buildings. The side dimensions of the cleared area should be at least one half of the projected altitude. An area for a radius of at least 5 feet (1.5 meters) from the launcher should be clear of dry grass or other flammable substances. Read and follow the Model Rocket Safety Code of the National Association of Rocketry (NAR) and comply with all federal, state, and local laws in all activities with model rockets. A copy of the NAR safety code is shown on the instructions that come with all AEROTECH composite rocket motors.
- FLIGHT PROFILE: When the launch button of the electrical launch controller is pressed, an electrical current causes the AEROTECH COPPERHEAD™ single lead igniter to ignite the composite propellant of the AEROTECH rocket motor. The motor quickly builds up thrust and powers your AEROTECH rocket into the air. During powered flight the rocket increases in speed and altitude. When the propellant burns out the rocket is moving at maximum velocity and a time delay material (delay grain) inside the motor burns. While the delay grain burns the rocket coasts to peak altitude at which point the delay grain ignites the ejection charge wiithin the forward part of the motor. The ignition of the ejection charge creates a burst of hot expanding gas which is cooled by the permanent metal mesh of the LABYRINTH™ ejection gas cooling system. The cooled gas flows around the baffle, pressurizes the parachute bay and ejects the nose cone and parachute. The parachute then deploys and gently returns the rocket to the ground where the rocket can be prepared for another flight.
 - TRANSPORT AND STORAGE: To avoid damage to your AEROTECH rocket during transport, pack it in a box surrounded by soft packing. Store your rocket at room temperature.

NOTICE: As we cannot control the storage and use of our products, once sold we cannot assume any responsibility for product storage, transportation, or usage. RCS shall not be held responsible for any personal injury or property damage resulting from the handling, storage, or use of our product. The buyer assumes all risks and liabilities therefrom and accepts and uses AeroTech/RCS products on these conditions.

No warranty either expressed or implied is made regarding AeroTech/RCS products, except for replacement or repair, at RCS's option, of those products which are proven to be defective in manufacture within one year from the date of original purchase. For repair or replacement under this warranty, please contact RCS. Proof of purchase will be required. Note: Your state may provide additional rights not covered by this warranty.